



Thank you for purchasing Indicator lights meter, before operating the unit, please read the instruction thoroughly and retain it for the future reference.

⚠ Notice

1. The lcd meter is apply for DC 12V.
2. For installation, please follow the steps described in manual. Any damage caused by wrong installation shall be imputed to the users.
3. To avoid the short circuit, please don't pull the wire when installing. Don't break or modify the wire terminal.
4. Do not disassemble or change any parts excluding the manual description.
5. The interior examination or maintenance should be executed by our professionals.

MARK MEANING:

NOTE You could get the installation details from the information behind the mark.

⚠ Some processes must be followed to avoid the affection caused by wrong installation.

WARNING! Some processes must be followed to avoid damages to yourself or the public.

! Some processes must be followed to avoid the damage to the vehicle.

1-1 Accessory

1 Meter X 1	2 Main harness X 1	3 Bracket X 1	4 M4 screw X 2
5 Manual			

NOTE Please contact the local distributor if the items you open are not the same, with the above-listed one.

2 Installation instructions

Meter (Accessory 1)

Bracket (Accessory 3)

Main harness (Accessory 2)

M4 screw (Accessory 4)

When installing, please follow the process.

1. Meter (Accessory 1)
2. Bracket (Accessory 3)
3. M4 screw X 2 (Accessory 4)
4. Main harness (Accessory 2)

NOTE Please connect the harness with the original wire.

3 Basic function instruction

Indicators lights

- High beam (Blue) H
- Oil pressure (Red) O
- Flash (Green) F
- Neutral (Green) N

● Bulb specification	T5 / 2W
● Effective voltage	DC 12V
● Effective temperature range	-10~+60°C
● Meter standard	JIS D 0203 S2
● Meter size	D48 X 46.4 mm
● Meter weight	Around 80 g

NOTE Design and specification are subject to change without notice!