

NOTICE DE MONTAGE


CAPOT DE SELLE ERMAX ADAPTABLE SUR MSX 125 2013 → ∞ Durée estimée de montage : 20 min

Kit de fixation



- 2 équerres de fixation
- 2 rondelles plastique Ø6
- 2 rondelles acier Ø6 L
- 2 agrafes filetées Ø6
- 2 vis BHc 6x15 grosse tête noir
- 2 entretoises plastique Ø10 int. Ø20 ext. ép. 5 mm

Montage

- Retirer la selle de la moto.
- Démontez la sangle d'origine en dévissant les 2 écrous sous la selle. Garder les écrous.
- Positionner les agrafes filetées sur les équerres de fixation comme ci-dessous :

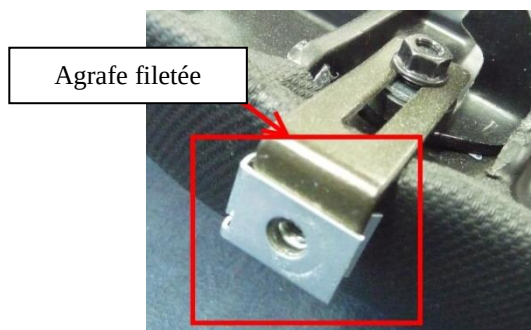

- Monter les équerres de fixation en insérant l'entretoise plastique et la rondelle acier comme indiqué ci-dessous :

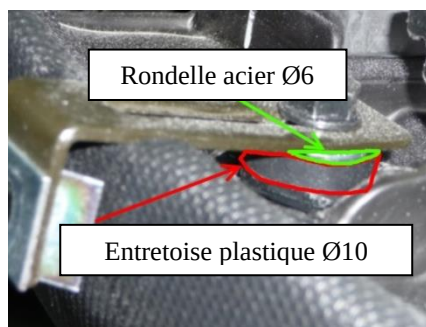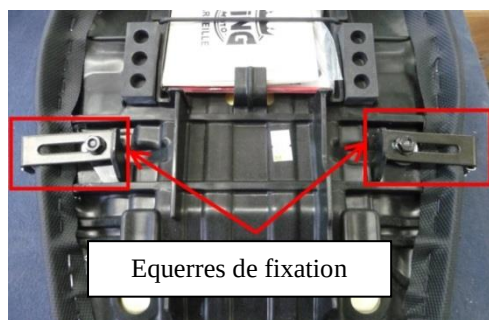

- Remonter la selle et présenter le capot de selle Ermax.
- Fixer le capot de selle Ermax à l'aide des 2 vis 6x15 et des 2 rondelles plastique Ø6.



Bon montage

Mauvais montage

« ATTENTION »

- * Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'attendre un mois afin d'obtenir une polymérisation complète du vernis.
- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- * Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- * Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- * Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

FITTING INSTRUCTIONS


ERMAX SEAT COVER **ADAPTABLE ON MSX 125 2013 → ∞** Estimated fitting instructions : 20 min

Fitting kit



- 2 fixing brackets
- 2 plastic washers Ø6
- 2 steel washers Ø6 L
- 2 threaded fasteners Ø6
- 2 screws BHc 6x15 big head black
- 2 plastic spacers Ø10 int. Ø20 ext. th. 5 mm

Fitting

- Remove the saddle from the motorbike.
- Put of the original strap by unscrewing both nuts under the saddle. Keep the nuts.
- Place the threaded fasteners on the fixing brackets as below :

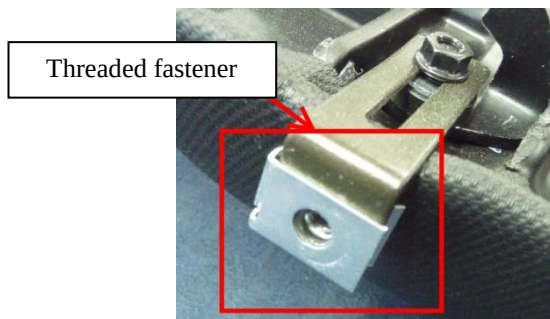

- Fit the fixing brackets by inserting plastic spacer and steel washer as below :

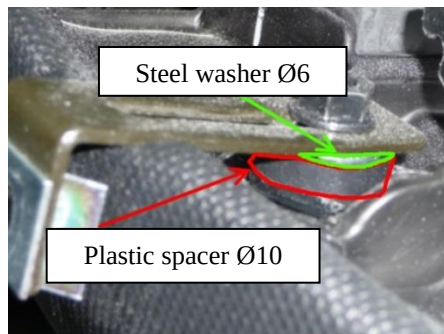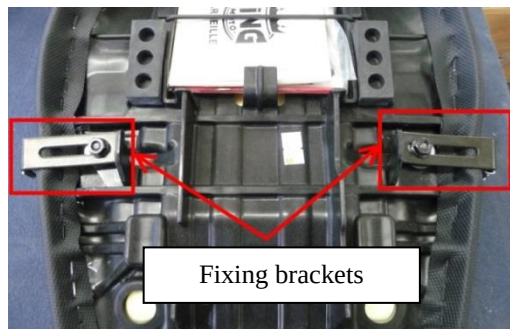

- Refit the saddle and put the Ermax seat cover.
- Fix the Ermax seat cover thanks to both screws 6x15 and both plastic washers Ø6.



Good fitting

Bad fitting

« CAUTION »

* Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, **to wait one month** to obtain a complete polymerization of varnish.

* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.

* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.

* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.

* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.

* Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.