



- 2 NE01-01-011 - Tbhc 6x35mm
- 2 NE01-02-001 - Tfhc 6x16mm
- 2 NE01-02-023 - Tfhc 6x12mm
- 2 NE01-02-003 - Tfhc 6x25mm
- 2 NE01-03-001 - M6 Washers
- 2 NE01-04-003 - Em6f
- 1 PM01-06-055 - N°35
- 1 PM01-06-056
- 1 PM01-06-057
- 2 NE10-01-004 - Alloy spacers
- 1 NE04-01-200 - Sticker



AX1625

XTREM SKID PLATE

TM RACING


EN250Fi 4T- EN300Fi 4T

TUTORIAL VIDEO :




1

Fix the plastic part by auto drilling with the Tfhc 6x16mm
Fixer la pièce plastique par autoperçage avec Tfhc 6x16mm

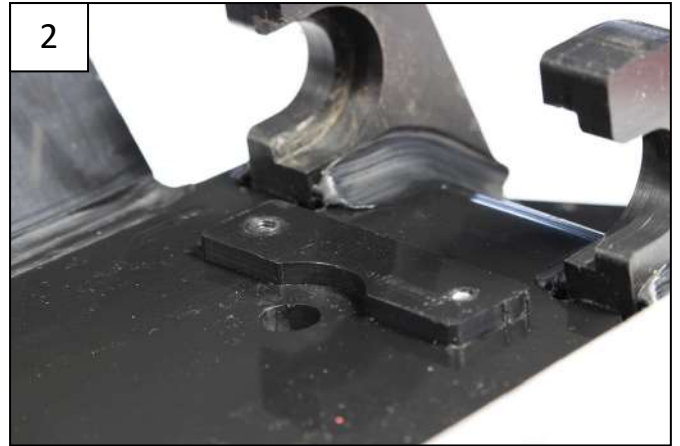


2

Fix the plastic part by auto drilling with the Tfhc 6x12mm
Fixer la pièce plastique par autoperçage avec Tfhc 6x12mm

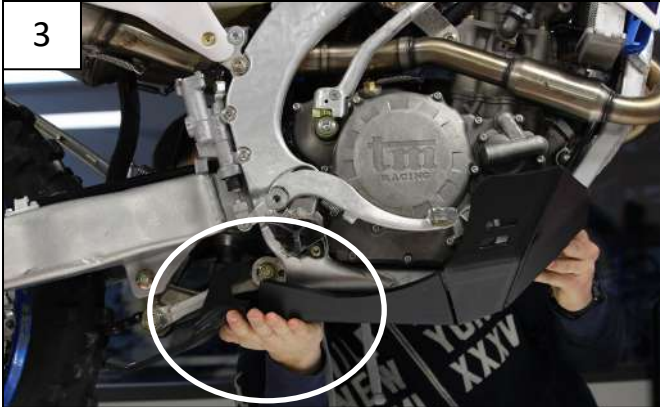

3

Push the skid plate to the top (3) and the to the front to engage the rear plastic mounts (4)
Pousser le sabot vers le haut (3) et ensuite vers l'avant pour enclencher les crochets arrières (4)

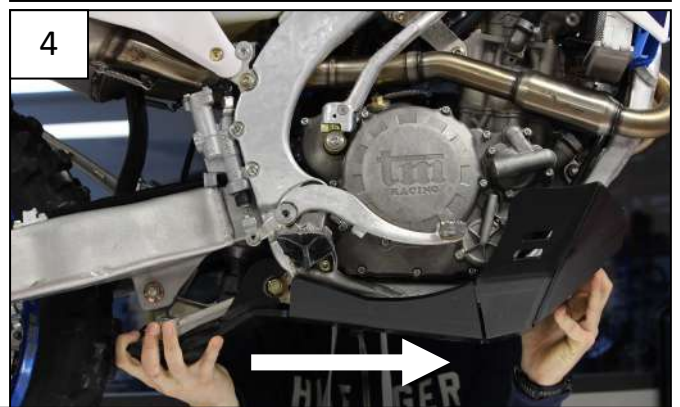


4



5

Tbhc 6x30mm + Alloy spacers

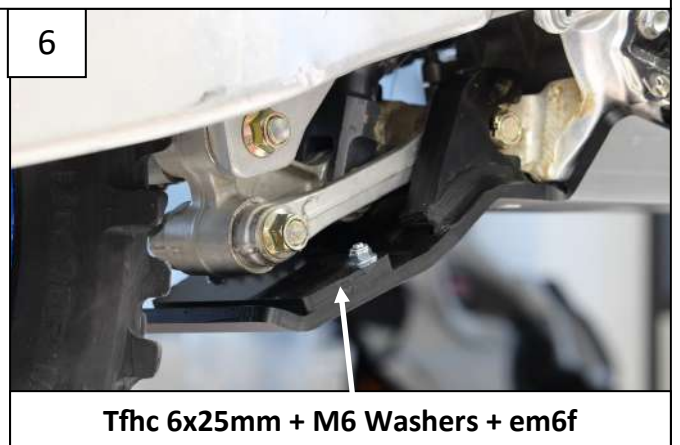

6

Tfhc 6x25mm + M6 Washers + em6f