



- 2 NE01-01-019 - Tbhç 6x40mm
- 2 NE10-01-004 - Alloy spacers
- 4 NE01-02-004 - Tfhç 6x30mm
- 4 NE01-02-003 - Tfhç 6x25mm
- 8 NE01-03-001 - M6 Washers
- 8 NE01-04-003 - Em6f
- 2 PM01-04-221 - Rear mounts
- 1 PM01-06-054 - N°34 Plate
- 1 PM01-05-017 - Front bloc




VIDEO



AX1629
XTREM SKID PLATE
TM RACING 125/144Fi 2T

1

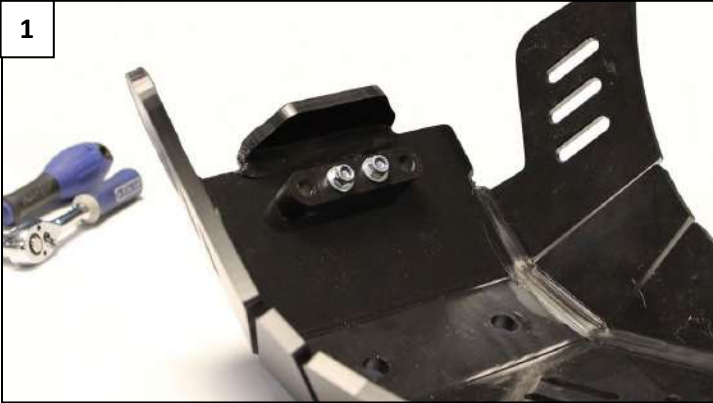


Fix the front block by using :
Fixer la cale avant en utilisant :
2 Tfhç 6x30mm / 2 Em6f / 2 M6 Washers

2



Fix the front block by using :
Fixer la cale avant en utilisant :
2 Tfhç 6x30mm / 2 Tfhç 6x25mm / 4 Em6f / 4 M6 Washers

3

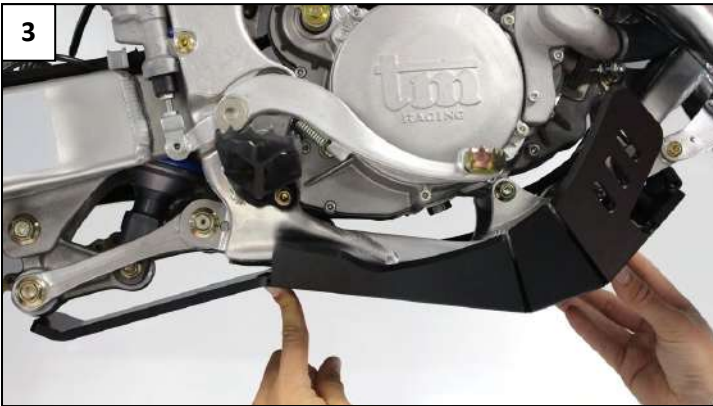

Push to the top and then to the rear to make the plastic mounts clamped on the frame.
Pousser vers le haut puis vers l'arrière pour clipser les crochets

4



5



Fix the skid plate with:
Fixer le sabot avec:
2 Alloy spacers / 2 Tbhç 6x40mm

6



Fix the rear plate with:
Fixer la plaque arrière avec:
2 Tfhç 6x25mm / 2 Em6f / 2 M6 Washers