



AX1648

HVA TC250 / TX300

Blue Skid Plate 6mm



YouTube

- 2 NE01-11-001 - Screws
- 2 NE01-04-002 - Clamped bolts
- 2 NE01-05-008 - Tchc 6x45mm
- 6 NE01-03-001 - M6 Washers
- 4 NE01-04-003 - Em6f
- 2 NE01-02-002 - Tfhc 6x20mm
- 2 NE01-02-004 - Tfhc 6x30mm
- 1 PM01-05-018 - Plastic block 15mm
- 1 PM01-04-229 - Plastic block 20mm
- 1 PM01-04-230 - Plastic block 20mm
- 1 NE04-01-205 - Blue sticker




VIDEO



Put the clamped bolts inside of the plastic block / Insérer les écrous pinces



Rear view / Vue arrière

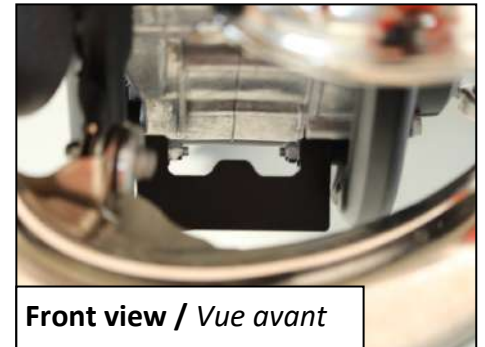

Front view / Vue avant

Place the front plastic fixation as shown / Placer la fixation avant suivant les photos : 2 Tchc 6x45mm + 4 M6 Washers + 2 Em6f



Tchc 6x45mm + M6 washer



Tfhc 6x30mm + M6 washer + Em6f



Tfhc 6x20mm by manual drilling / par auto perçage



Clip the rear mount on the rear tube / Clipser la fixation arrière sur le tube arrière



Make several test to adjust the front fixation/ Faites plusieurs test pour ajuster la fixation avant



Fix the front / Fixer l'avant
6x25mm screws