



C-RACER
www.c-racer.com


INSTRUCTION

Page 1/2

Model	Product	Code
KTM 390/290 Adventure	Chain Guard	CG-KTM390-SB / BS

CONTENTS

1. 1pcs Aluminio Chain Guard
2. 1pcs screws M6X15 (allen-round head-washer)
3. 1pcs screws M6X20 (allen-round head-washer)
4. 1pcs screws M5X55 (allen-round head-washer)
5. 1pcs washers 6X12
6. 1pcs safety nuts M6
7. 1pcs washers 6X18
8. 1pcs washers 5X12

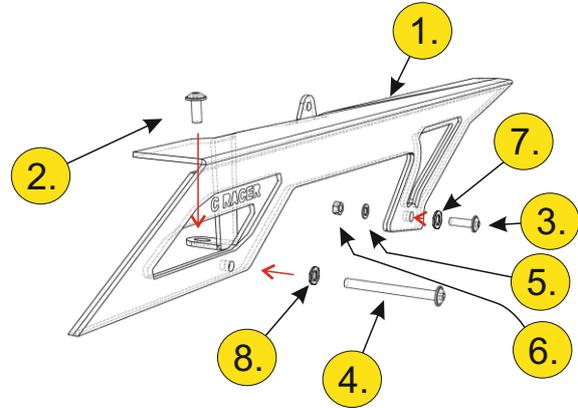

To place the new fender, you must remove the old one. In the photos you may find the order and the place of the screws you must remove.

First remove the cover from the front left footrest, this helps to remove the front screw of the chain guard, also remove the one at the back side.

After that remove the nut, (not easily seen). (In the second photograph you will see the place of the nut, only seen from the right side under the shock absorber).

Then remove the two main screws. (In the third photograph there is only the right side, on the left side there is the same screw)

After you have removed all the screws you must open the back side of the chain guard which covers the base on which it was mounted, to get it through from the chain. Then rotate the fender and because it is elastic you can carefully remove it.



Put the chain guard in place and pass the screws (profile 4-8 front & 3-5-6-7 for back) without tightening them, just touch them to hold the product in place.



Then insert the screws (screw layout 2). Just get them through without tightening them.

Replace the sash guard. This product is recommended for on-off use. It only protects the chain and you from the grease which has. It does not protect the shock absorber and its surrounding area from mud, water, and soil.



We wish you many and good kilometers!
Thank you for choosing one of our products.

The product is for race use only

For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: info@c-racer.com