


## INSTALLATION INSTRUCTION

| Model            | Product               | Code   |
|------------------|-----------------------|--------|
| HONDA Monkey 125 | Front Fender Scrabler | FFS-HM |

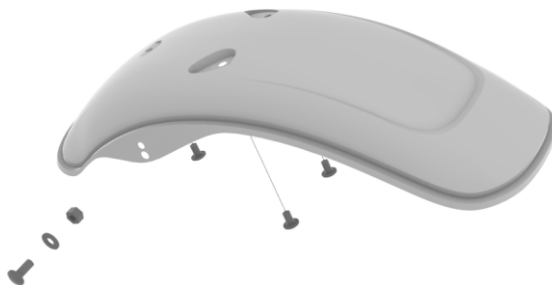

### CONTENTS

1. 1pcs fake wing
2. 3pcs M6X10 allen oval screws
3. 1pcs Screws M6X1510 allen oval
4. 1pcs M6 safety nut
5. 1pcs washer 6X18

### MATERIAL DESCRIPTION

The product is made of ABS plastic in glossy black color.  
The screws, nuts, washers and all the rest required for the installation are galvanized in silver color.



These are the contents you will find inside product packaging. Also in the package you will find a card containing the link to download the PDF file with the installation instructions detailed step-by-step with photographic material.


Before starting the installation, read the instructions to have a better idea about the tools you will need and the required skills. Otherwise we suggest to contact a professional.

**The product is for race use only**


For any further information please do not hesitate to contact us: Tel.: +30 2108075387 Email: [info@c-racer.com](mailto:info@c-racer.com)



Remove the screw that holds the tubes of the front brake.

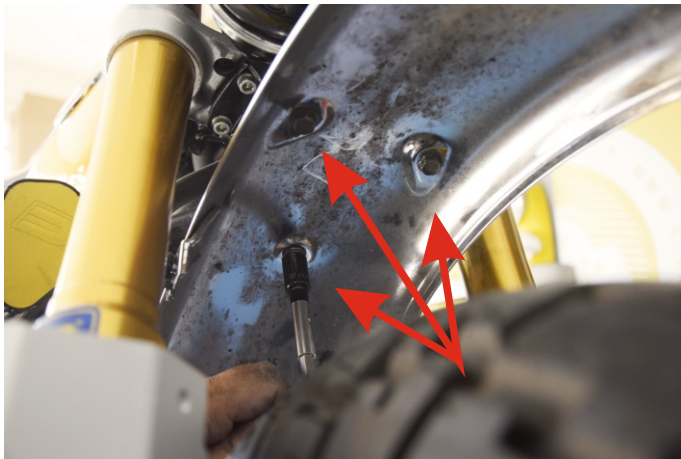

Remove the 3 screws holding the fender at the bottom and remove it from the motorcycle.

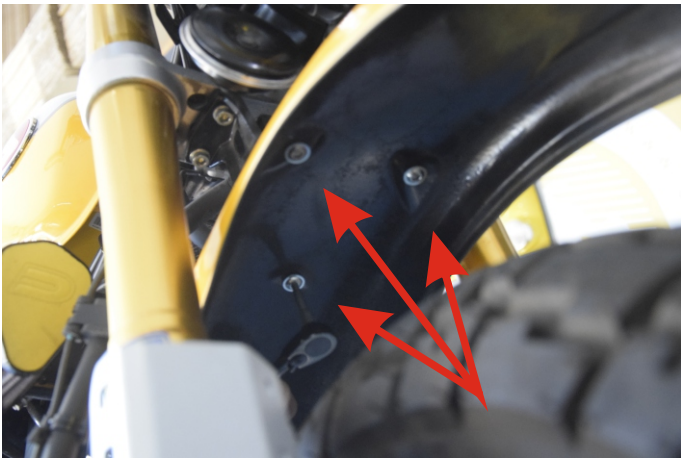

Place the new fender in place of the old one and screw it with the new screws that are in the package and tighten it well.



Finally fit the other screw with the washer and the nut in the middle to hold them and tighten it.



This will be your final result. Enjoy your Rides!