INSTRUCTION


Page 1/3




Model	Product	Code
YAMAHA Tenere 700/T7	Front Mud Guard	FMG-YT7

CONTENTS

- 1. 1pcs Plastic Fender
- 2. 6pcs screws M6X15 (a Ilen-oval-washer)
- 3. 4pcs screws M6X10 (a llen-oval-washer)
- 4. 4pcs s afety Nuts M6
- 3. 6pcs washers 6X18

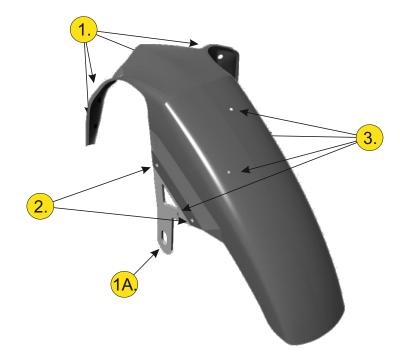

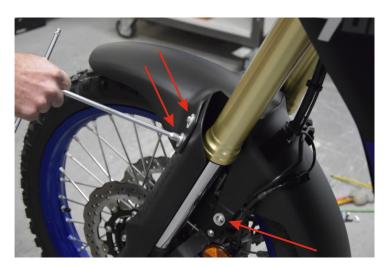

Remove the front fender of the motorcycle.

To do this you must first remove the 6 screws where the arrows point. Remove the oval washers along with the screws. You may store these, in case you want to restore the part to it's original form in the future,





Before removing it from the motorcycle, open the clips that hold the front brake hose and the ABS cable with a small straight screwdriver. Carefully open them and remove the above, pipes and cable. Carefully pull the fender forward to escape from the tubes and pass between the forks.



When you remove it, turn it upside down and with a small pair of pliers, (as demostrated in the photo) lightly press the clips from the inside to remove them from the fender. Be sure to keep those for the new mud guard.



First remove the protective film from the mud guard.

Insert the two plates included in the package (red arrow) and screw them (as demostrated). Align it and tighten the screws very well.

Then fasten the clips that you had removed from the fender and place them in the same position as they were. Make sure they are securely fastened and do not close them so that the tubes can be fitted.

If you have deformed them while removing them, with a small screwdriver press the teeth that have them outwards and put them in place.





Carefully insert the fender at the position of the old one. Be careful with the tubes it will be difficult to pass those again in the correct position inside the clips.

Pass the tubes in the clips but do not fasten them like in the photo.



Then tighten the remaining screws that secure the fender. Before tightening, make sure that the part is properly aligned. When you have tightened all the screws, place the hoses in their exact position and close them by pressing each one separately.



This will be your end result.

Protected from the mud, dirt and stones. Enjoy your dirty rides!