


SHAD

HONDA CB 650 F '14
HOCF64IF

3P
SYSTEM

DESIGNED IN
BARCELONA

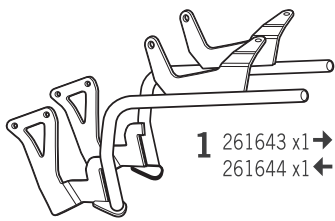

1 261643 x1 →
261644 x1 ←



2 202478 x2



3 201672 x4
Ø18 Ø12 Ø7 x 7,5-2



4 304057 x4
M6 x 25 DIN 912



5 303000 x4
Ø6



6 260760 x2
Ø20 Ø11 x 16



7 303025 x 2
Ø10



8 304209 x2
M10 x 45



9 260417 x2
Ø16 Ø9 x 16



10 303020 x6
Ø8



11 304036 x2
M8 x 45 DIN 7380



12 304272 x4
M8 x 35 Din 7380

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

