

10L Hurricane Roll Bag Mounting Instructions

SE-4010


Please read instructions carefully before installation. We recommend this product be installed by a qualified, and experienced technician. If you are unsure of any of the below directions and or your ability to correctly and securely install this product, please contact us or your local dealer for help. Below diagrams show typical installation. Your vehicle may be different so please use diagrams as a guide. Make sure your vehicle is clean and free from dirt, road grime, etc. where the product mounts. It is the rider's responsibility to make sure the product is mounted and secure before each use. Loading the bag may result in a change of position. **Always check for proper mounting position after loading and before each and every ride.**



1. Fill the bag to the desired level, open the air valve 1/4 turn to allow bag to compress and roll down the top a minimum of 3 half turns. Be sure to close valve when done and not over tighten.



2. Once the top has been rolled down to the size of your contents, connect the quick release buckle to hold the roll in place.

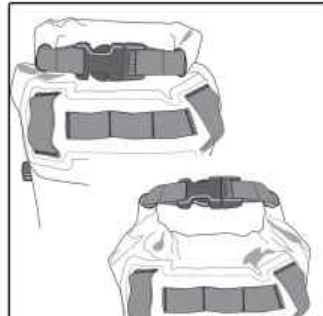

3. You can connect the buckles over the top like a handle or we recommend folding the ends around the front rolled section of the bag.




4. Place the Dry Roll Bag with the MOLLE loops facing up on your seat, saddlebag or desired location. Be careful not to place it on a sharp or hot surface.



5. Loop one of the four Rigg Straps® around a rack or secure location on your vehicle. Pass the cam hook through the loop on the long strap end and pull to secure. Repeat with other 3 straps.



6. Pass the cam hook thru the large webbing loop and connect to one of the MOLLE loops. Once all straps are connected, make sure the bag is centered and pull all straps tight. Tie off any loose straps or fold under the provided elastic strap keepers.

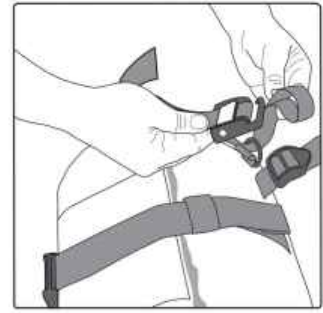

7. To mount to our Hurricane Saddlebags, loop one of the four Rigg Straps® around a D-ring on the back side of the saddlebag. Pass the cam hook through the long strap loop and pull to secure. Repeat with other 3 straps.



8. Pass the cam hook through the webbing loops on the roll bag and hook through the webbing loops on the front side of the saddlebag. Connect the center strap with buckle and pull all straps to secure.

Warning

Read the installation instructions and make yourself familiar with the process of installing the Rigg Gear product(s) on your vehicle. It is your responsibility to install the product(s) correctly and securely as outlined in these instructions. Rigg Gear products must not be overloaded or over tightened. Failure to adhere to these warnings may result in, but not limited to, the product becoming detached, becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.

Always drive safely. Always wear a helmet and protective apparel.

3518 W Lake Center Drive, Ste. A
Santa Ana, CA 92704 USA
Tel (714)850-1811 E-mail: info@nelsonrigg.com
www.nelsonrigg.com

RIGG GEAR
ADVENTURE