

# SHAD

## BMW F900 R / XR '20 - W0FR91SR



1 262969 x 1 →  
262970 x 1 ←



2 260213 x 2  
Ø16 Ø9 x 12



3 302027 x 4  
Ø8



4 303045 x 4  
Ø8



5 304272 x 4  
M8x35 DIN 7380



6 260417 x 2  
Ø16 Ø9 x 16

### WARNING!

**GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


**E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


**I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**F** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.


1

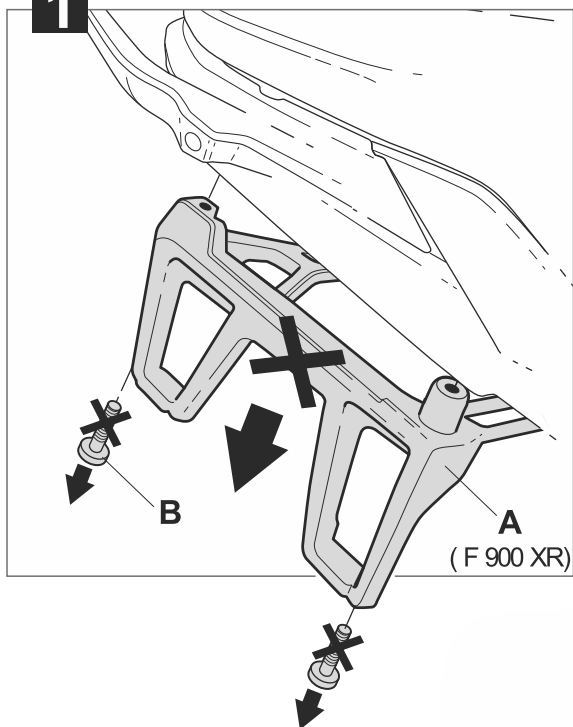

2

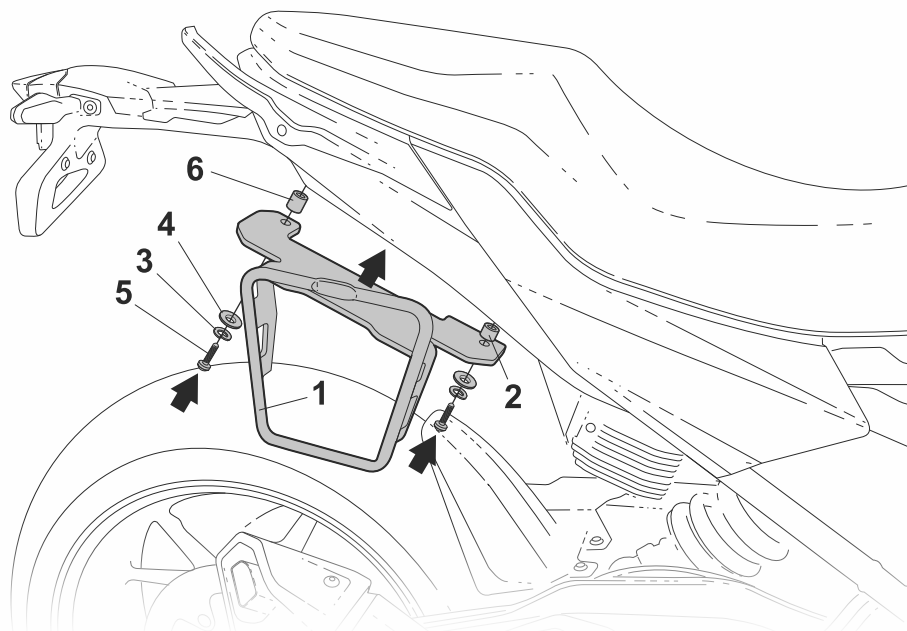

TOP MASTER

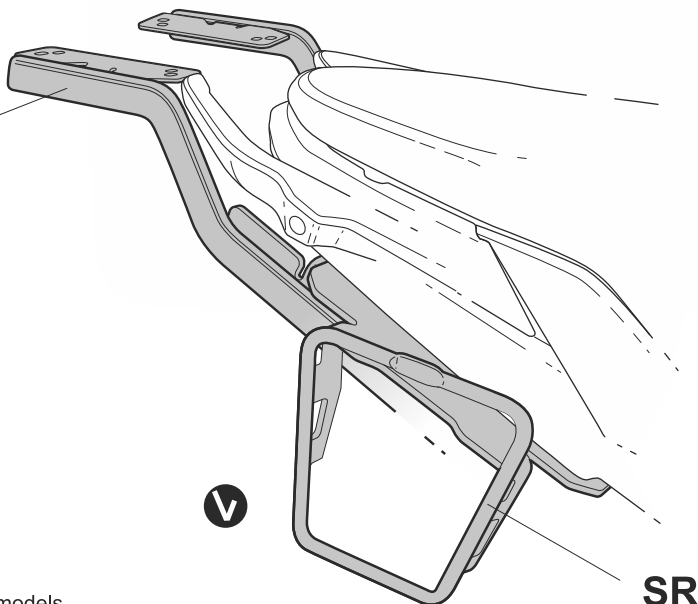

[WWW.SHAD.ES](http://WWW.SHAD.ES)

REF. 500479 Edition 1ª

**IMPORTANT:** Based on European models.

For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)