


# SHAD


## BMW S 1000 XR '20- W0SX104P

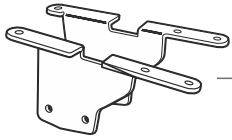

**1** 262659 x 1 →  
262660 x 1 ←



**2** 303027 x 8  
Ø8

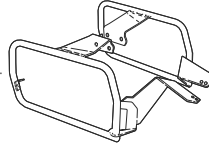

**3** 263072 x 1 →  
263073 x 1 ←



**4** 303045 x 8  
Ø8



**5** 304053 x 4  
M8x30 DIN 7380




**6** 302024 x 4



**7** 260648 x 3  
Ø16 Ø9 x 5



**8** 303020 x 4  
Ø8



**9** 304039 x 4  
M8x40 DIN 7380



**10** 263074 x 1



**11** 302021 x 2  
M6



**12** 303017 x 4  
Ø6



**13** 304052 x 2  
M6x20 DIN 7380

### WARNING!

**GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**F** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

