


**Important:** If you are not a trained motorcycle mechanic stop now. Ask a local motorcycle shop to do the work for you.

**Please take special care!**

The Crash-Pads has to be mounted one side after the other! Don't release both engine bolts at the same time!

**Fitting on the right side**

(view from rear)

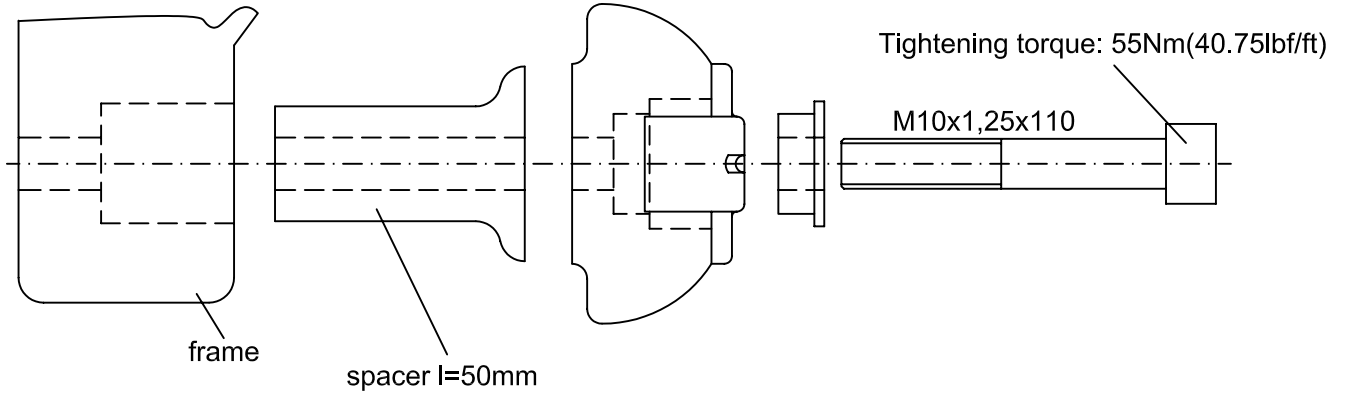

**Fitting on the left side**

(view from rear)

