
<u>Important:</u> If you are not a trained motorcycle mechanic stop now. Ask a local motorcycle shop to do the work for you.

Please take extra care!


You have to mount the crash-pads one side after the other! Do not loose more then one engine mounting bolt at the same time!

The tightening torques refer to the manufacturer's instructions!

Fitting on the right side:

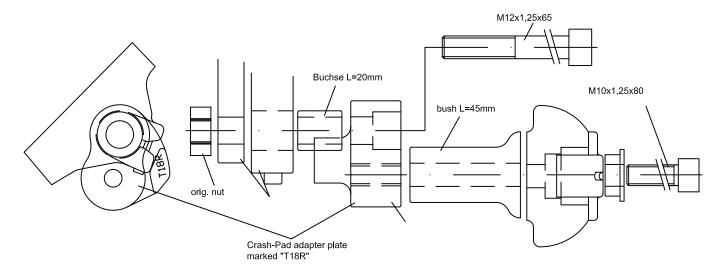


Fitting on the left side:

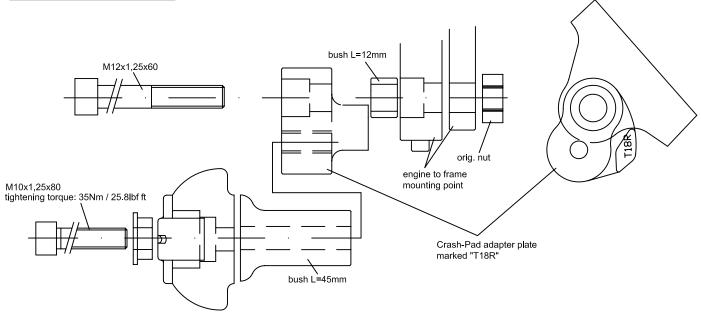



Stand: 17.01.2007

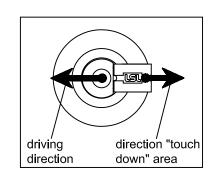

Part.no.: 550BE01