
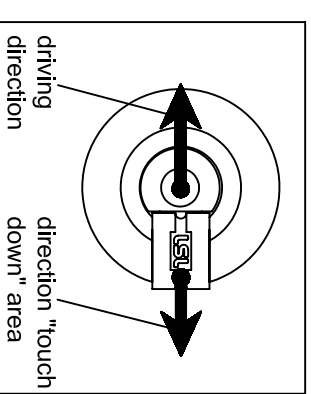


Important! If you are not a trained motorcycle mechanic stop now. Ask a local motorcycle shop to do the work for you. The Crash-Pads will be mounted on the front engine to frame bracket. Therefore replace the original engine bolt and mount the crash-pads with spacers as shown on the picture.

Important! Support the engine, before you take out the bolt.

Please also take care, that both nuts M10 will be mounted symmetrical. Tightening torque 45Nm.

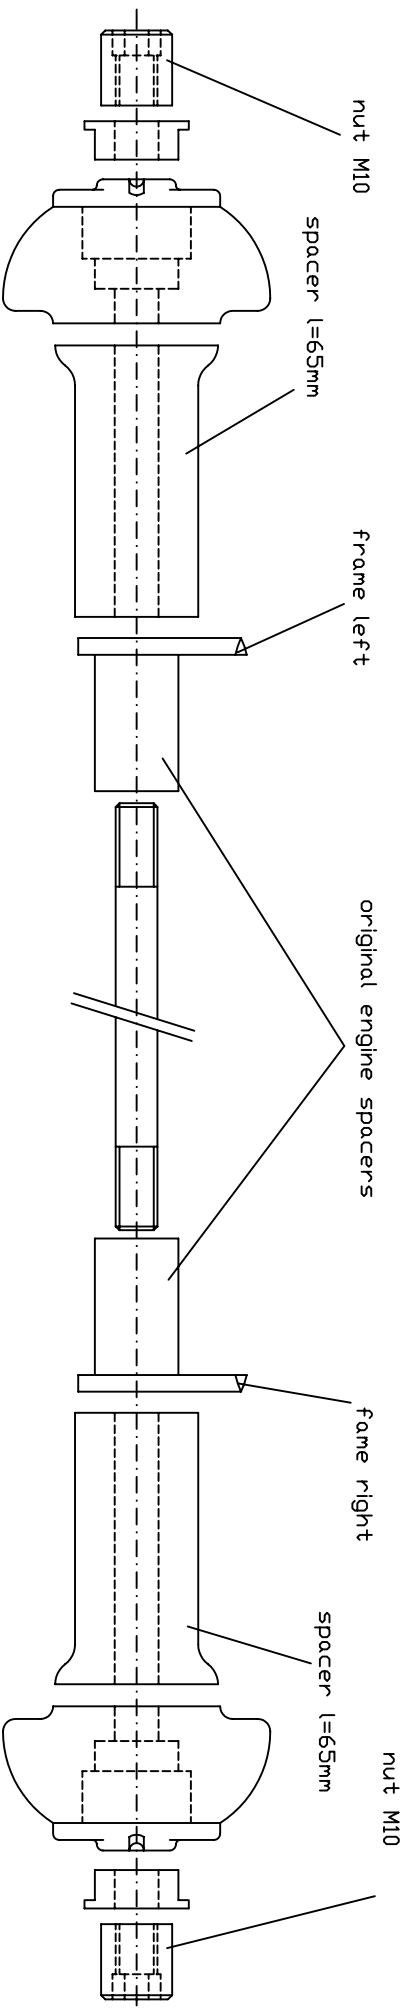

LSL-Motorradtechnik GmbH • D-47809 Krefeld
www.lsl.eu