


SHAD

HONDA CROSSRUNNER VFR 800X '15

HOCR85IF



1 261839 x1 →
261840 x1 ←




2 261460 x2
Ø18 Ø11 x 45



3 304170 x4
M8 x 60
Din 7380



4 303045 x4
Ø8

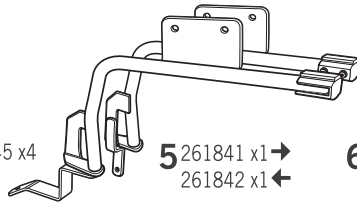

5 261841 x1 →
261842 x1 ←



6 304088 x2
M8 x 35
Din 7991



7 304028 x4
M8 x 25
Din 7380



8 303020 x10
Ø8



9 302024 x6
M8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

