
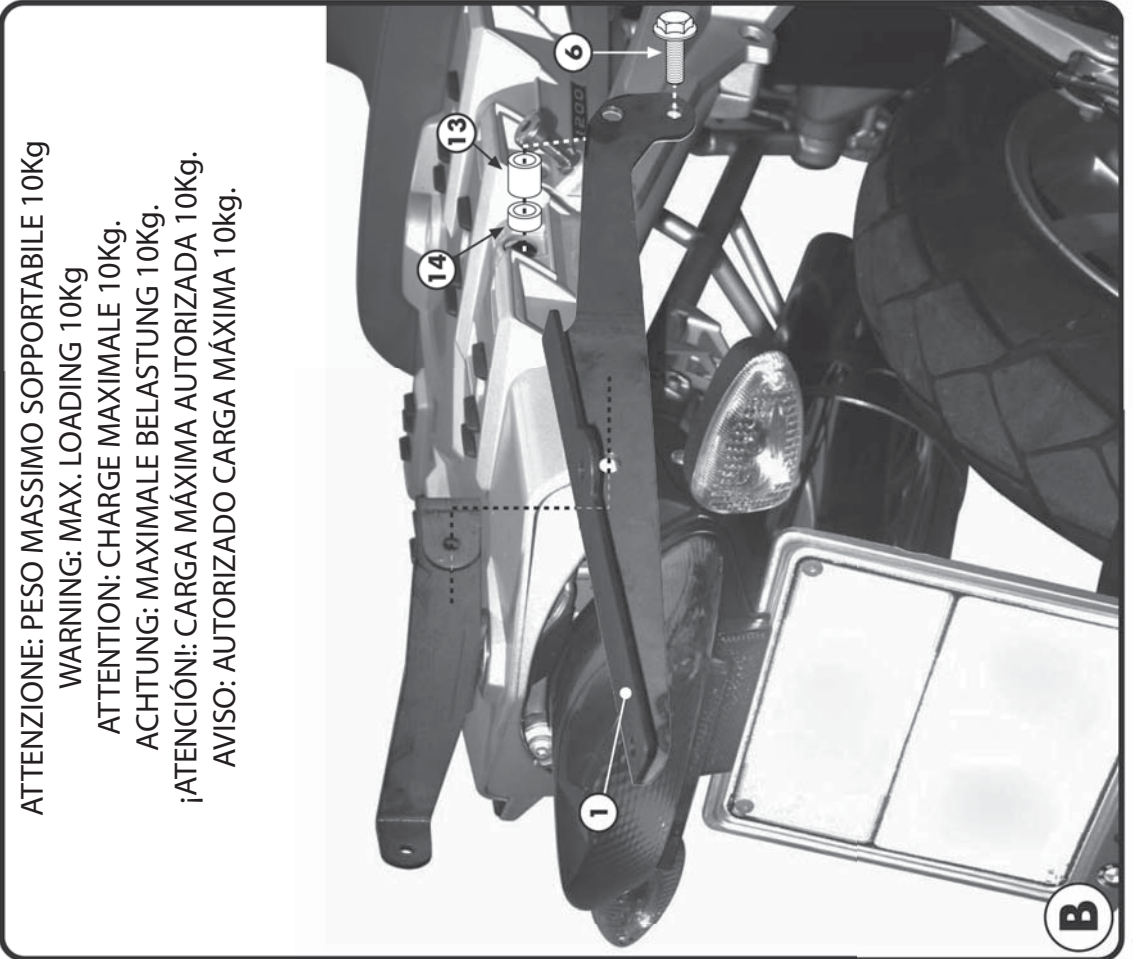
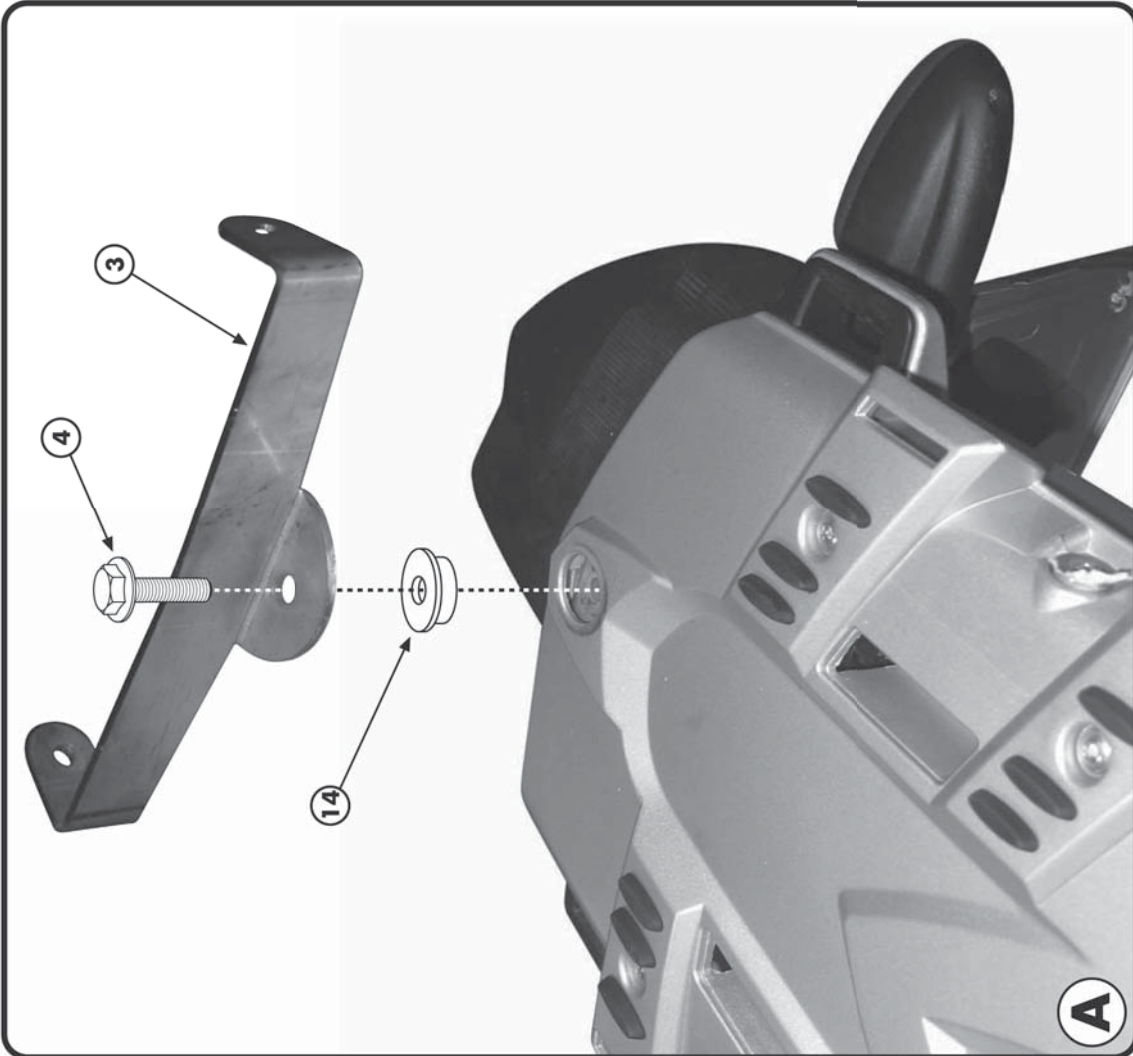
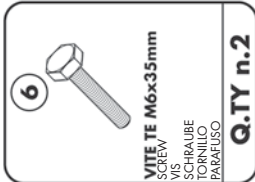
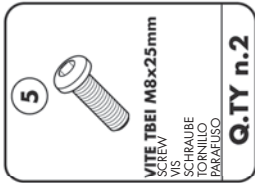
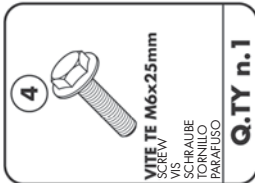
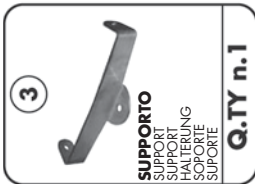


PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER  
PORTE-VALISE SPECIFIQUE - SPECIFISCHER KOFFER-TRÄGER  
PORTA-EQUIPAJE ESPECIFICO - TRANSPORTADOR ESPECIFICO

## BMW R1200GS '04/'08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCCIONS DE MONTAGE  
BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

SR689 - KR689

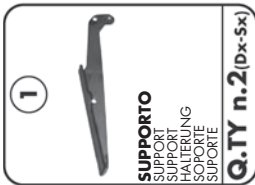

**ATTENZIONE: PESO MASSIMO SOPPORTABILE 10Kg**

**WARNING: MAX. LOADING 10Kg**

**ATTENTION: CHARGE MAXIMALE 10Kg.**

**ACHTUNG: MAXIMALE BELASTUNG 10Kg.**

**¡ATENCIÓN!: CARGA MÁXIMA AUTORIZADA 10Kg.**

**AVISO: AUTORIZADO CARGA MÁXIMA 10kg.**


PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER  
 PORTE-VALISE SPECIFIQUE - SPECIFISCHER KOFFER-TRÄGER  
 PORTA-EQUIPAJE ESPECIFICO - TRANSPORTADOR ESPECIFICO

# BMW R1200GS '04/'08


ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCCIONES DE MONTAJE  
 BAUANLEITUNG - INSTRUÇÕES DE MONTAJE - INSTRUÇÕES DE MONTAJE


**13**  **DISTANZIALE Ø18x7mm  
SPACER Ø8,5mm, V497**  
 ENTRETOISE  
 DISTANZSTÜCK  
 DISTANCIADOR  
 ESPACADOR  
**Q.TY n.-**


**14** **COMPONENTI ORIGINALI**  
 ORIGINAL PARTS  
 PARTES ORIGINALES  
 ORIGINALBAUTEILE  
 COMPONENTES ORIGINALES  
 COMPONENTES ORIGINAIS  
**Q.TY n.-**

**15**  **RONDELLA f18x20mm**  
 WASHER  
 RONDELLE  
 SCHEIBE  
 ARANDELA  
 ARRUELA  
**Q.TY n.4**


**16**  **PIASTRA MONOKEY**  
 PLATINE  
 PLATINE  
 PLATTE  
 PARRILLA  
 PRATO  
**Q.TY n.1**

**17**  **RONDELLA f18x14mm**  
 WASHER  
 RONDELLE  
 SCHEIBE  
 ARANDELA  
 ARRUELA  
**Q.TY n.2**

**18**  **VITE TBEI M8x30mm**  
 SCREW  
 VIS  
 SCHRAUBE  
 TORNILLO  
 PARAFUSO  
**Q.TY n.2**


**19**  **DADO A.B. M8**  
 BOLT  
 ECRICOU  
 MUTTER  
 TUERCA  
 PORCA  
**Q.TY n.4**


**7**  **RONDELLA Ø8mm**  
 WASHER  
 RONDELLE  
 SCHEIBE  
 ARANDELA  
 ARRUELA  
**Q.TY n.2**


**8**  **VITE TCEI M6x35mm**  
 SCREW  
 VIS  
 SCHRAUBE  
 TORNILLO  
 PARAFUSO  
**Q.TY n.4**

**9**  **RONDELLA Ø6mm**  
 WASHER  
 RONDELLE  
 SCHEIBE  
 ARANDELA  
 ARRUELA  
**Q.TY n.4**


**10**  **RONDELLA Ø6x20mm**  
 WASHER  
 RONDELLE  
 SCHEIBE  
 ARANDELA  
 ARRUELA  
**Q.TY n.4**

**11**  **DADO A.B. M6**  
 BOLT  
 ECRICOU  
 MUTTER  
 TUERCA  
 PORCA  
**Q.TY n.4**

**12**  **COPRIFORO**  
 5091  
**Q.TY n.6**

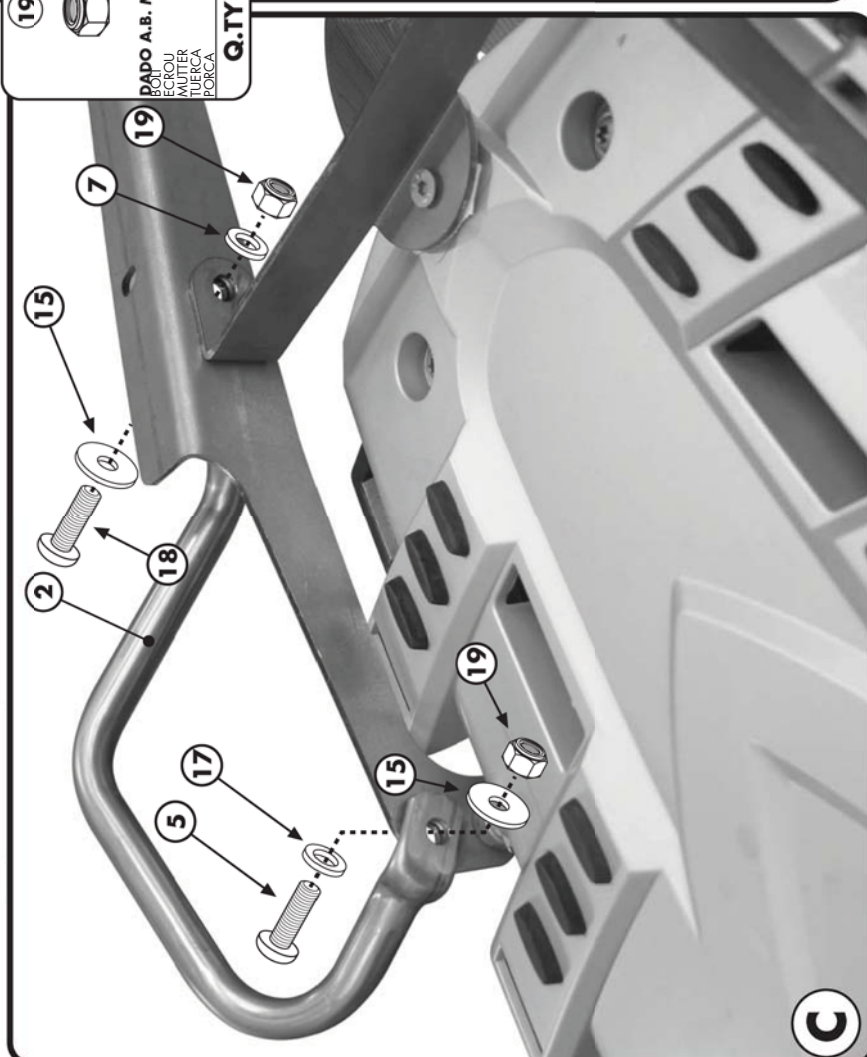

**C**

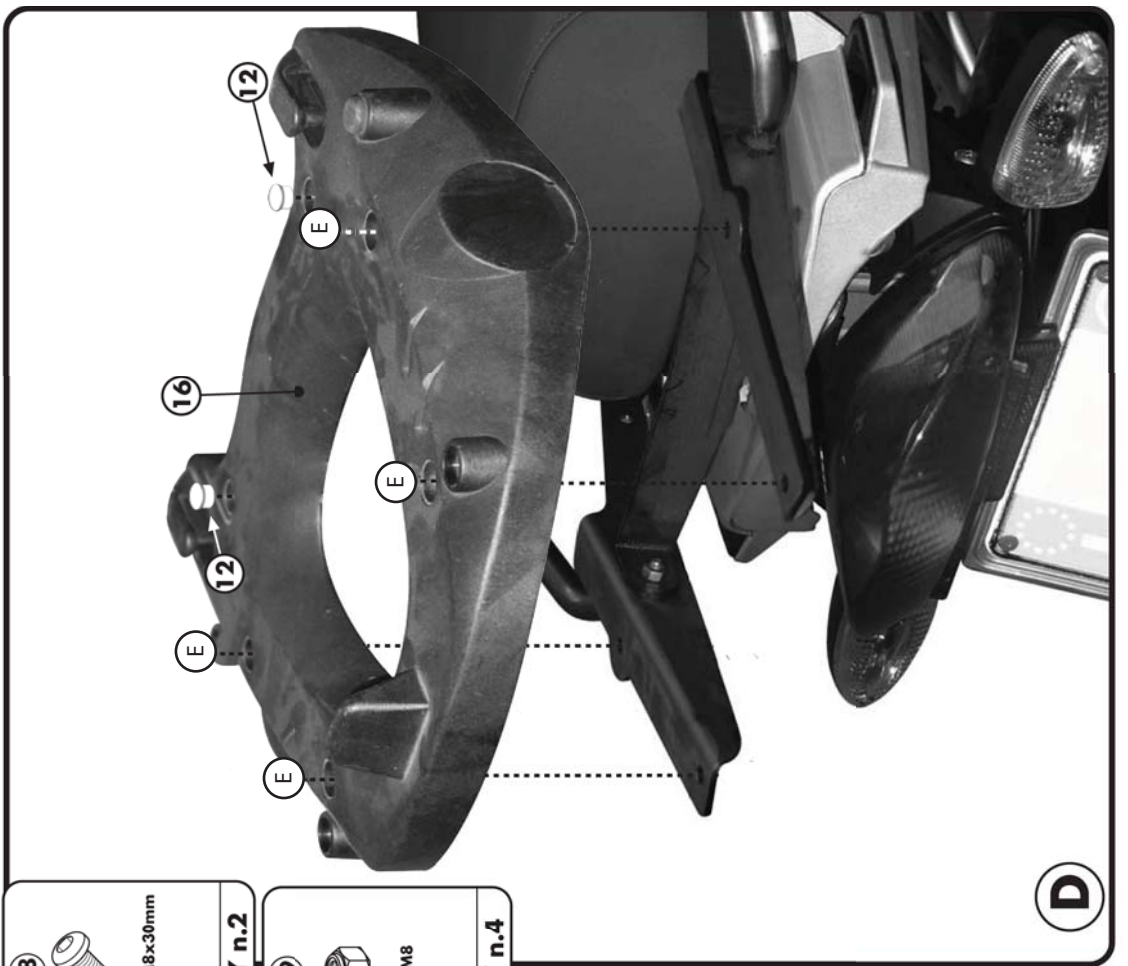


**D**




PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER  
 PORTE-VALISE SPÉCIFIQUE - SPEZIFISCHER KOFFER-TRÄGER  
 PORTA-EQUIPAJE ESPECÍFICO - TRANSPORTADOR ESPECÍFICO

# BMW R1200GS '04/'08

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS - INSTRUCTIONS DE MONTAGE  
 BAUANLEITUNG - INSTRUCCIONES DE MONTAJE - INSTRUÇÕES DE MONTAGEM

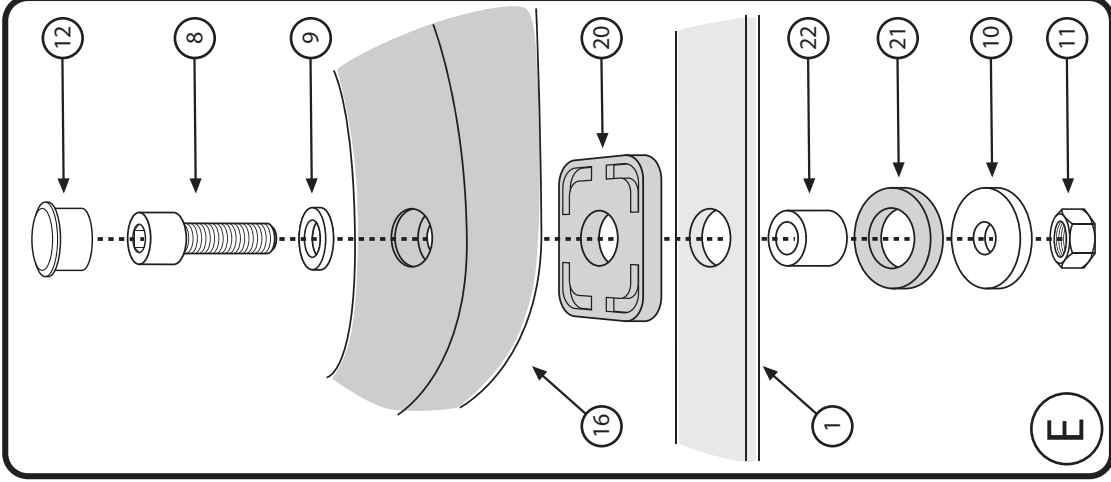SR689 - KR689



<p>20</p>  <p>GOMMINO Z1822 RUBBER PAD GOMME GUMMI GOMA BORRACHA</p> <p>Q.TY n.4</p>	<p>21</p>  <p>RONDELLA IN GOMMA Z1823 RUBBER WASHER GOMME GUMMISCHIBEI GOMMA ARRUELA</p> <p>Q.TY n.4</p>	<p>22</p>  <p>DISTANZIALE Ø11x11mm foro Ø3,5mm V887 SPACER RANGELAGE DISTANZSTÜCK ESPACIADOR ESPACADOR</p> <p>Q.TY n. 4</p>
---	---	--