


# SHAD

BMW R 1200 R / RS '15

WORS15IF

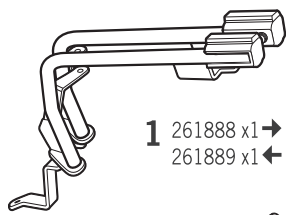

1 261888 x1 →  
261889 x1 ←



2 261072 x2  
Ø20 Ø9 x 32



3 303045 x8  
Ø8



4 304170 x3  
M8 x 60 DIN 7380



5 304028 x2  
M8 x 25 DIN 7380



6 304169 x1  
M8 x 50 DIN 7380



7 302024 x2  
M8

## ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

